


Futon Frame

Assembly Instructions

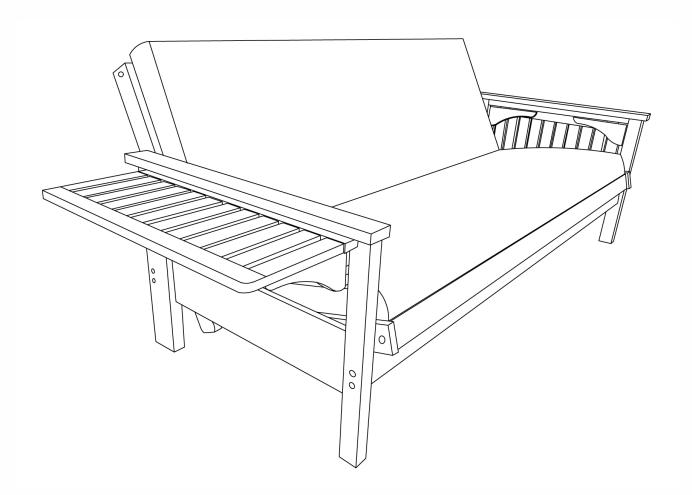

Required:



Video instructions




www.kodiakfurniture.com

Tools Needed:



Allen Key provided

Please cover floor with corrugated cardboard / paper / carpet to avoid scratches / damages to floor

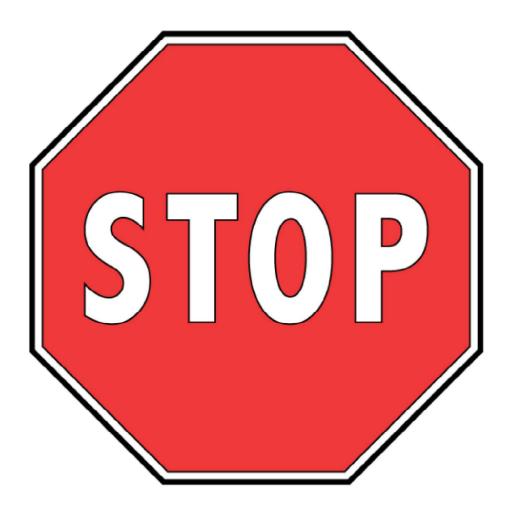


DO NOT RETURN TO RETAILER
IF YOU HAVE ANY
QUESTIONS OR CONCERNS
PLEASE CALL
KODIAK FURNITURE
AT 651-641-0281
MONDAY- FRIDAY 8AM TO 3:30 PM CST

OR EMAIL TO info@kodiakfurniture.com OR VISIT OUR WEBSITE AT www.kodiakfurniture.com



Futon Frame

Assembly Instructions

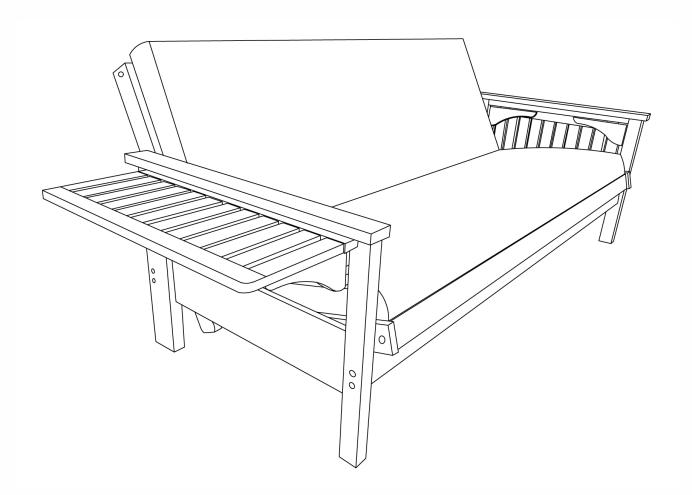

Required:



Video instructions



www.kodiakfurniture.com

Tools Needed:




Allen Key provided

Please cover floor with corrugated cardboard / paper / carpet to avoid scratches / damages to floor




Body

Assembly Instructions

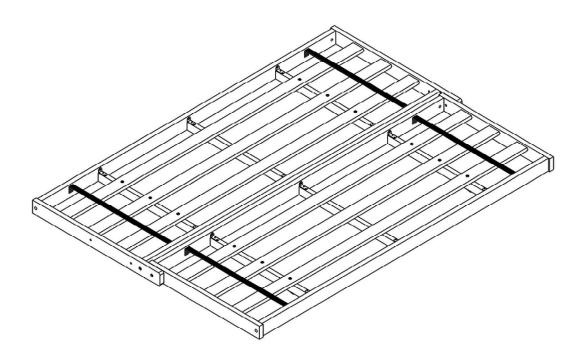

Recommended:



Tools Needed:




Allen Key provided


Please cover floor with corrugated cardboard / paper / carpet to avoid scratches / damages to floor

Assembly Checklist


Please make sure that you have all of the below items before you start. If any are missing, please contact us for a replacement.



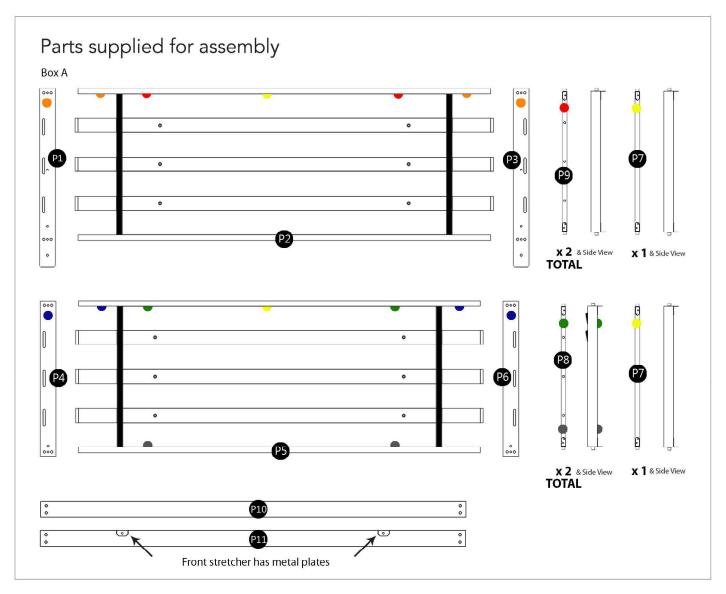


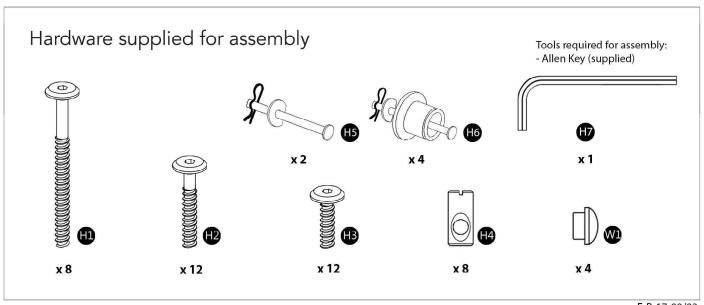


Step 1: Locate parts P2, P9(2), & P7 Use colored dots to align parts for connection. Orange Use rug or soft surface Red rellow

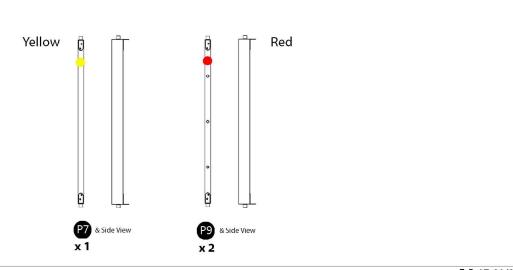

Step 2: Attach P7 and P9(2) to P2 with hardware as shown

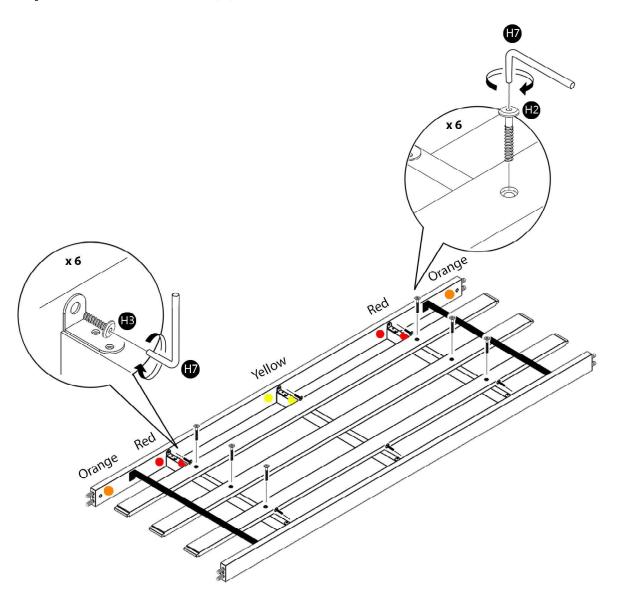

Loosely attach H2 and H3 bolts.

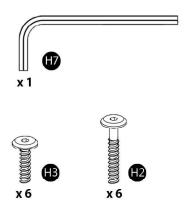


Step 3: Attach four nylon guides (H6) as shown x 4 Orange Orange

x 1


x 1


Step 4: Attach P1 & P3 to back deck P2

Use colored dots to align parts for connection.

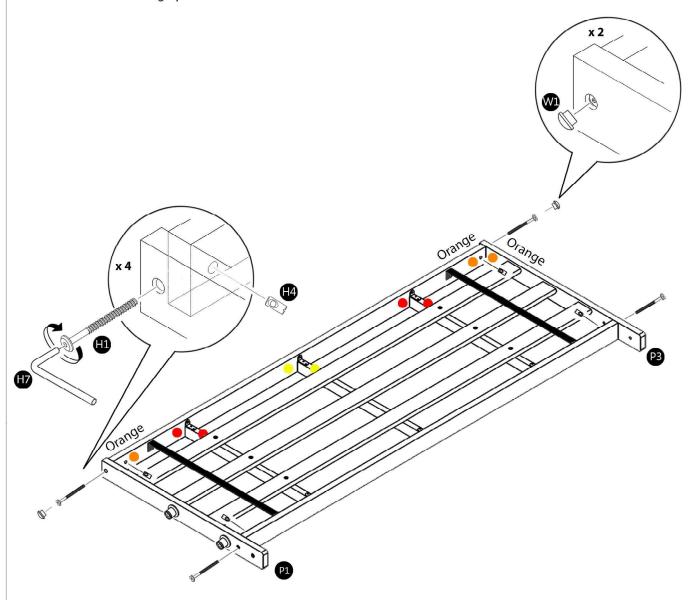


All bolts can be tightened at this point.

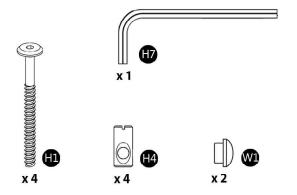


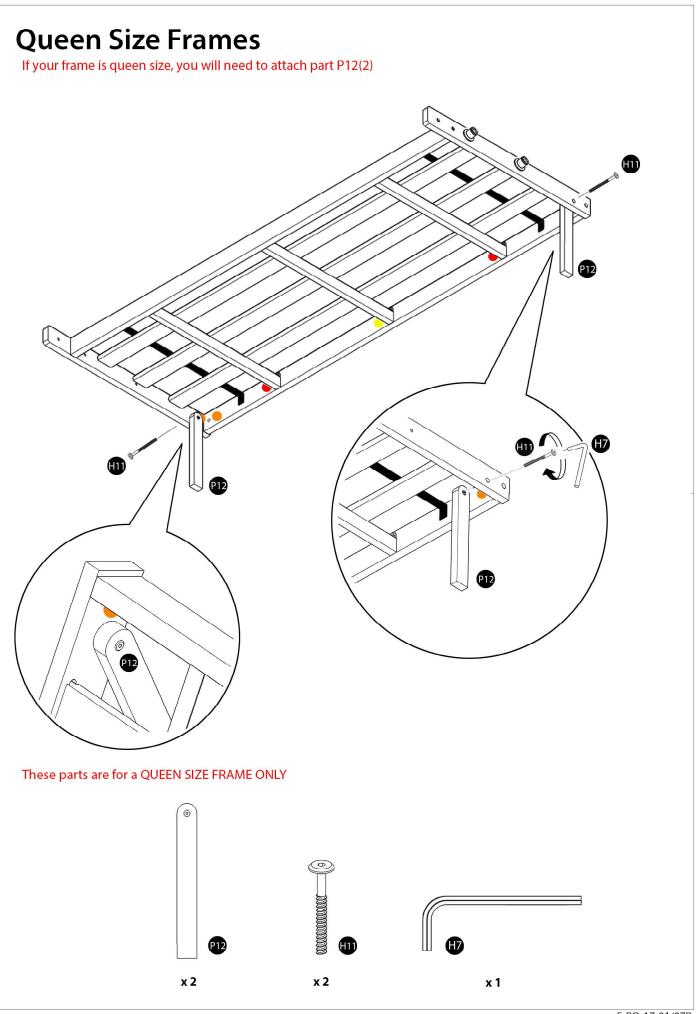


Step 5: Locate parts P5, P8(2), & P7 Use colored dots to align parts for connection. Rive Green Reliant Green Reliant Green Green

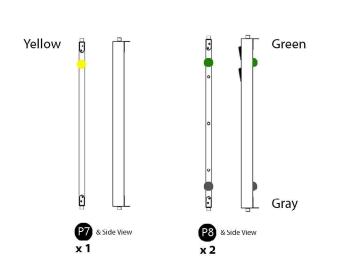

Step 6: Attach P7 and P8(2) to P5 with hardware as shown

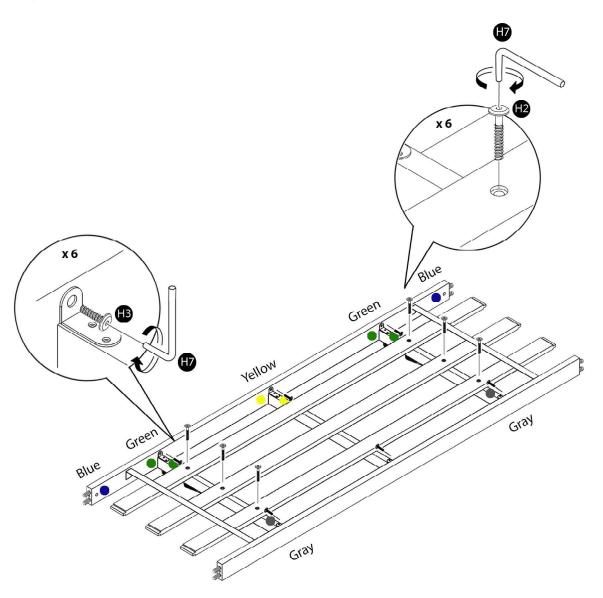



Loosely attach H2 and H3 bolts.

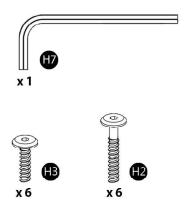

Step 7: Attach P4 & P6 to seat deck P5 Use colored dots to align parts for connection. x 2 **P4** All bolts can be tightened at this point. Blue Blue x 1 x 1 x 1

Step 8: Connect the fully assembled seat and back decks using hardware H5 (x2) as shown below

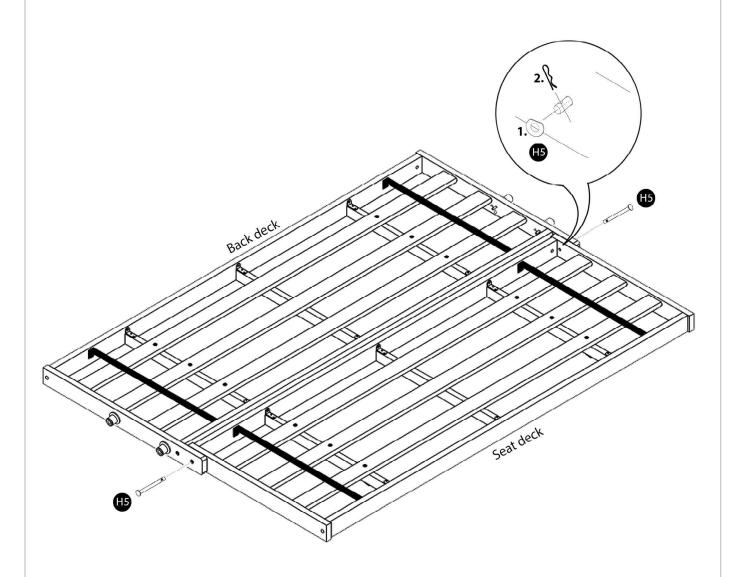






Assembly Checklist

Please make sure that you have all of the below items before you start. If any are missing, please contact us for a replacement.




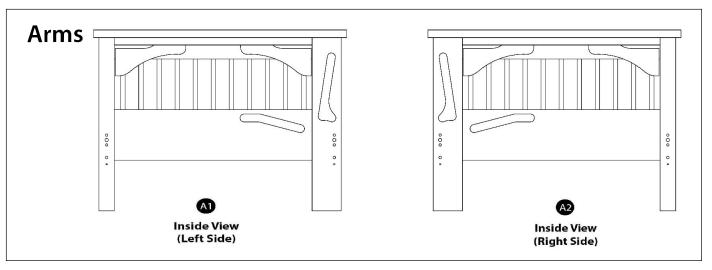

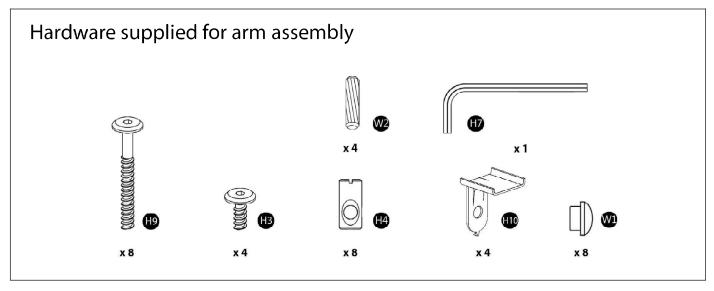

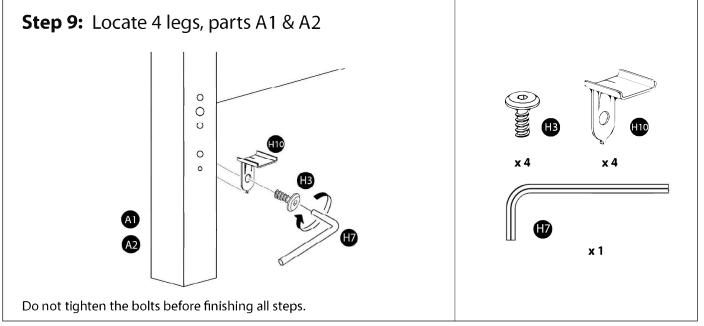


Step 10: Insert wood dowels (W2) into stretchers (P10) and (P11) as shown

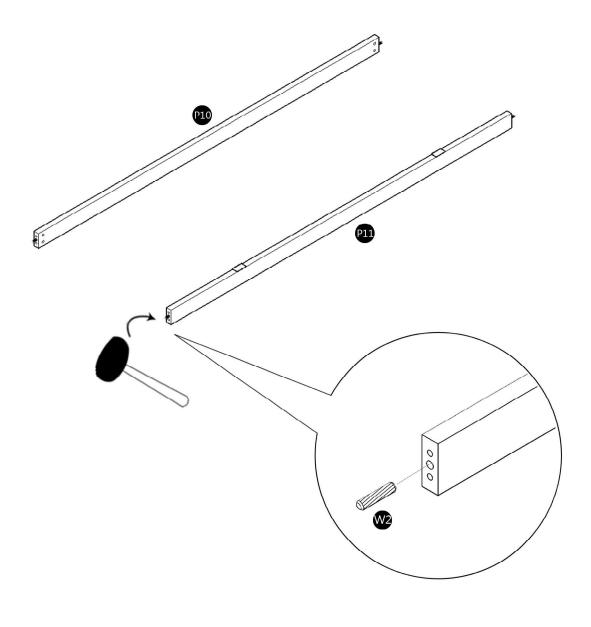





Step 11: Attach P10 & P11 to A1 & A2 with hardware as shown

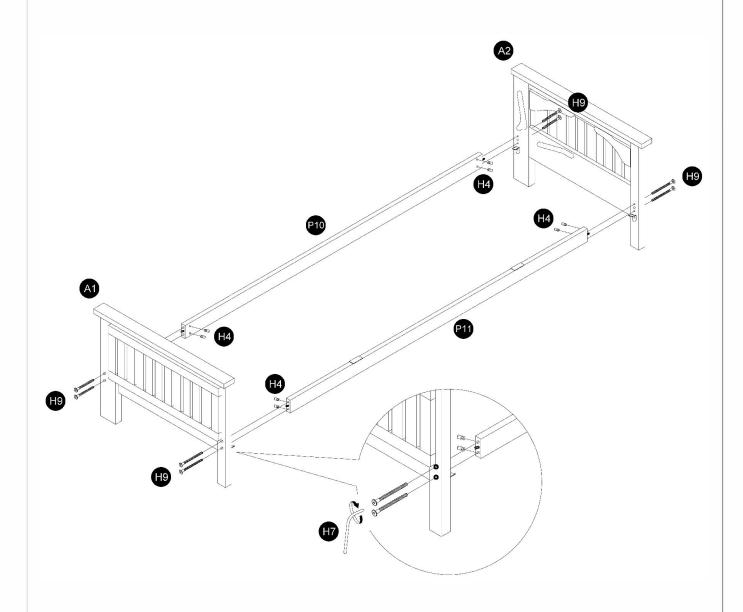


The bolts need to be very loosely attached at this point. Your arm may vary.

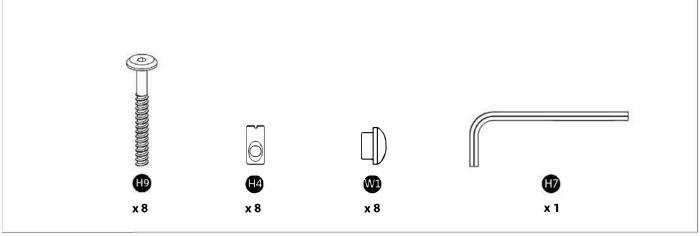

Step 12: Align H6(4) into grooved out slots on A1 & A2.

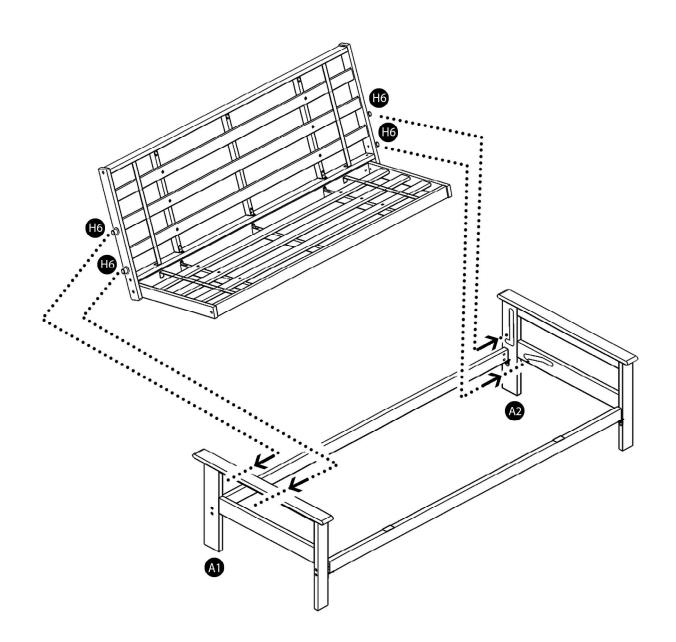


The bolts need to be very loosely attached at this point. Tighten all bolts after everything is in place.

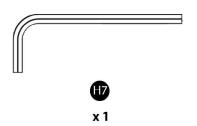


Assembled views

Your arm may vary.

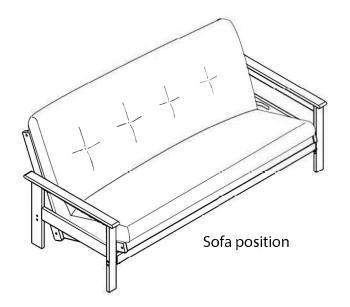

Sofa position to Lounge position.

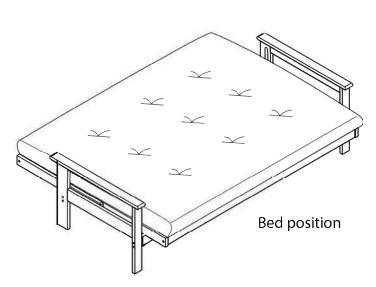

Bed position

